

Maintenance Instructions

ATTENTION: Ensure there is **NO FLOWING WATER** into the unit whilst accessing the strainer basket.

Carry out the following daily 

- 1-3 TIMES WEEKLY: flush through with clean hot water from the sink tap for 5 minutes to clear sediments and to reduce odours
- EVERY 3 MONTHS: Tank pump out required by service partner

1. GREASE CONTAINER



When the grease container is full, remove and dispose of contents for recycling.

2. WIPER BLADE INSPECTION



Access wiper blade by first removing the container hood.



Lift and remove the wiper blade by moving it from guide rails.



Clean the blade thoroughly and replace. Replace container hood.

3. STRAINER BASKET



Unlock Strainer cap by rotating counter clockwise using the hand grips.



Shake basket to allow excess water to drain from basket before removing.



Remove basket by sliding outwards.



Dispose contents to rubbish bin. Replace basket and cap.

4. DAILY INTERNAL SPRAY DOWN (WHERE APPLICABLE)



Open the valve by hand, for no more than 20 seconds.



Remember to close valve.



BS EN ISO 9001:2008



FOR SERVICE CALL +44(0)28 302 66616
www.greaseguardian.com
www.greaseguardianusa.com